

How to use The Plasma Walk-and-Talk

There are three places you can use your walk & talk.

1. A smart classroom with a smart whiteboard
2. A portable walk & talk plasma screen
3. A smart studyroom in the LRC



Step 1: Contact Instructional Technologist for training if this is your first time using the walk and talk.

cporter@hartnell.edu Cassidy Porter at 755-6772

Step 2: About 15 minutes before your class/meeting gather your materials

You will need the walk & talk remote

You will need the walk & talk pen

This equipment, for use in a studyroom or on a plasma cart, can be checked out from the media services in the LRC


If you are using the Distance Learning Room, please see Cassidy Porter in the FRC



How to use The Plasma Walk-and-Talk

Step 3: Turn on the computer

If you are in a smart room, start the computer in the desk and turn on the projector
If you are using the plasma screen, connect your laptop, turn on the plasma, and boot-up the laptop
The walk & talk software should launch on its own and show in the system tray

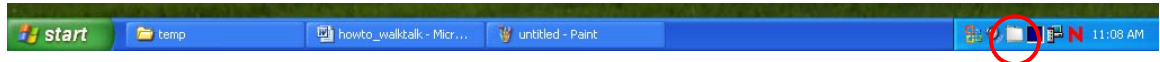

Step 4: Hit the projection button on the remote

This will allow you to calibrate the screen for your use, simply touch all four corners in any order.



How to use The Plasma Walk-and-Talk

Step 5: Use of the system.

Use the cursor like you would on any touch screen or palm pilot.


Double click slowly

Hold down the pen to right-click

You can drag and drop, move things around, and access folders like normal

You can use the pen function to draw on the screen

Hit the pen style button to chose a pen

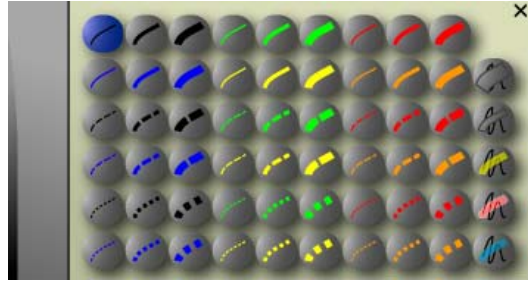

There are quick pen color buttons that allow you switch colors quickly without having the use the pen style dialog box




Use the cursor/Pen button to switch between pen and cursor




How to use The Plasma Walk-and-Talk

Use the keyboard button to bring up an on screen keyboard

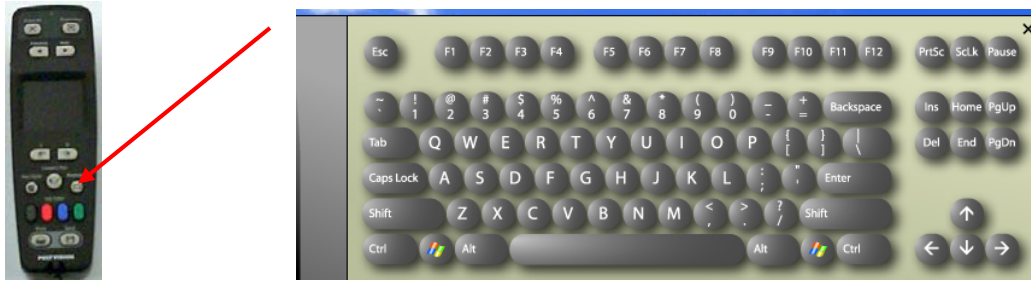

You can use the pen or the previous and next buttons to navigate WebPages

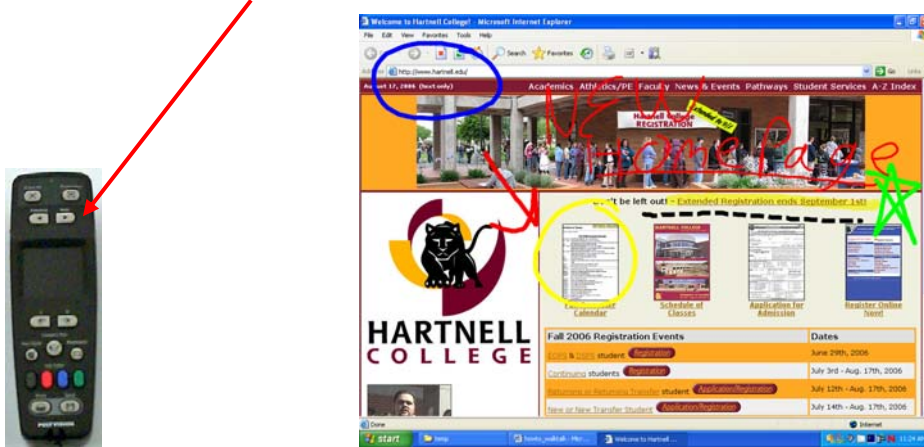

You can use the save button to save any drawings or annotations you made while using the pen (note that switching from cursor to pen will cause you to lose your drawings or annotations)



Note: the file should save to the desktop

How to use The Plasma Walk-and-Talk

In the center of the remote there is a touch pad and mouse buttons for use when you are away from the screen.



There is also a trigger under the remote that acts like a mouse click